



Medical single-phase valve assembly machine

Yuyao Zhiheng Automation Equipment Co.,Ltd is a research and development manufacturing and marketing of all types of automation equipment professional manufactures in China. We have a professional and technical team with ten years experience in the field of automation. We could provide custom-made automation solutions for your company. We have been able to provide a complete set of industry-specific equipment ranging from parts assembly to semi-finished products and finished products inspection.

Introduction of Medical single-phase valve assembly machine

Yuyao Zhiheng Automation Equipment Co.,Ltd is China manufacturer & supplier who mainly produces Assembly machine, Auto-Screwdriver machine and Riveting machine with more than ten years of experience. This Medical single-phase valve assembly machine is used for the Medical single-phase valve assembly. The machine automatically assembles the parts into finished. Automatic feeding spare parts. And with detection function, automatic blanking of good and bad products. The Medical single-phase valve assembly machine is mainly suitable for the manufacturers of medical device company.





Product video

Parameter (Specification) of Medical single-phase valve assembly machine :

Features,

- 1, Automatic feeding shell .
- 2, Automatic feeding the pillar.
- 3, Automatic feeding the seal ring.
- 4, Automatic feeding the spring and put it in the shell.
- 5, Automatic cap with plastic cover.
- 6, Automatic detection of cap.



www.haixinfstn.com

- 7, Automatic ultrasonic wave.
- 8, Automatic assembly the cap.
- 9, Automatic blanking (blanking of good and bad goods).

Specification,

Power supply: AC220V/50HZ

Air pressure: above 0.6Mpa

Yield: 1000-1200PCS/ hour

Custom-made machines for your reference:

- Automatic assembly machine for handles
- Automatic assembly machine for electrical pen
- Automatic assembly machine for Lip pomade
- Automatic assembly machine for bead transport
- Automatic assembly machine for spark lighter
- Automatic assembly machine for tool head
- Automatic assembly machine for sleeve spring
- Automatic assembly machine for white rod seal ring
- Automatic assembly machine for white rod of sanitary ware
- Automatic assembly machine for electric toothbrush head
- Automatic assembly machine for toothbrush small motor drive shaft
- Semi-automatic assembly machine for toothbrush head
- Automatic assembly machine for toothbrush head casing
- Automatic machine of marking tester for toothbrush charging base
- Automatic assembly machine for thermometer
- Automatic machine for thermometer test
- Automatic assembly machine for medical single-phase valve
- Automatic machine for riveting contact
- Automatic assembly machine for pin inserting
- Automatic machine for ultrasonic
- Automatic machine for transformer welding
- Semi-automatic machine for screwing
- Automatic assembly machine for temperature controller
- Assembly riveting machine of automobile seat belt
- Automatic machine for hair drier switch insert
- Automatic inserting assembly machine
- etc.

Pictures of Parts assembled:


Tel: +86-18042543089

Email: sales1@cnzhiheng.com



Zhiheng
Automation

www.haixinfstn.com

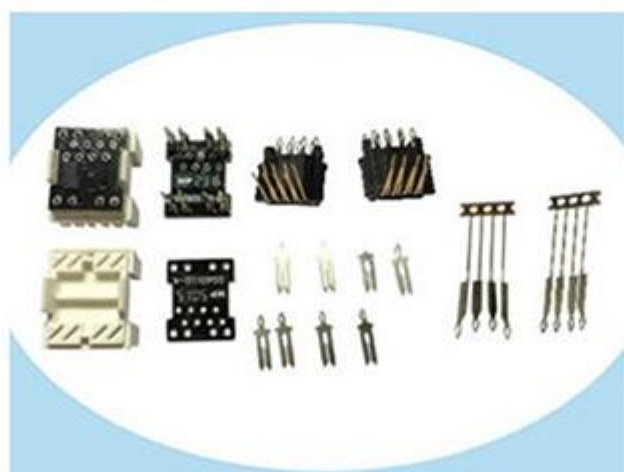

ASSEMBLY FOR THE PARTS



Zhiheng
Automation

www.haixinfstn.com



ASSEMBLY FOR THE PARTS




Zhiheng
Automation

www.haixinfstn.com



ASSEMBLY FOR THE PARTS

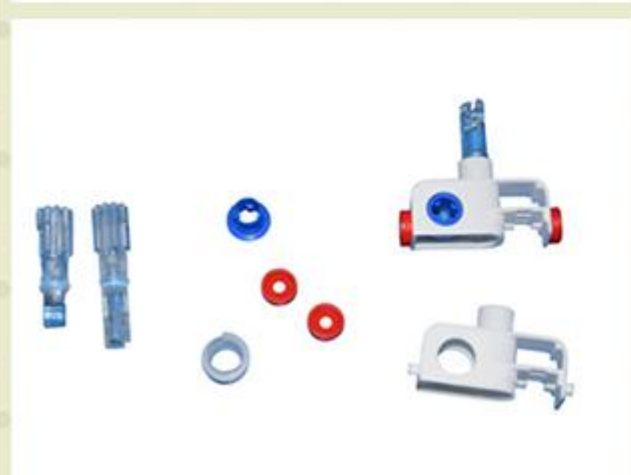



Zhiheng
Automation

www.haixinfstn.com





Zhiheng
Automation

www.haixinfstn.com



Pictures of Our Factory:

Tel:+86-18042543089

Email:sales1@cnzhiheng.com



Zhiheng
Automation

www.haixinfstn.com





Zhiheng
Automation

www.haixinfstn.com



ASSEMBLY



SHOP





**Zhiheng
Automation**

www.haixinfstn.com



INSPECTION AND



TRAINING





Zhiheng
Automation

www.haixinfstn.com





www.haixinfstn.com

Payment and terms:

- 1, DELIVERY TERMS: FOB NINGBO / SHANGHAI.
- 2, TERMS OF PAYMENT: TT 50% DEPOSIT AND 50% PAID BEFORE SHIPMENT.
- 3, DELIVERY TIME: 65 DAYS AFTER RECEIVED 50% DEPOSIT.

SERVICE

- 1, Training how to instal the machine. Training how to use the machine.
- 2, 1 year warranty, not including wearing parts , and human damage is not included.
- 3, If the problem can't be solved through video and phone, engineers available to servise machinery overseas.